

Table of content

Accessories

S-AST-241A33	1
S-CAH-CYBVA6	2
S-CAH-110.....	3
S-MVP-100/A.....	4
S-MSV-402/A.....	5
S-JDC-MAX.....	6

DNC 60 & DNC 600S

S-MB6-DNC60A8.....	7
S-MB6-DNC60A16.....	8
S-MB6-DNC60G	9
S-MB6-DNC600S	10
S-PAD-KIT60	11
S-PAD-KIT600S.....	12
S-PAD-DNC60.....	13
S-EPD-60.....	14
S-EPD-600S.....	15
S-MGR-101_A1.....	16
S-JDC-60.....	17

S-JDC-600S	18
S-COQ-60	19
S-COQ-600S	20
S-KIT-USB/RS232.....	21

DNC 400

S-MB6-DNC402P8	22
S-COQ-60	23

DNC 880S

S-MB8-DNC880S	24
S-OPT-MAX300/A	25
S-PAD-KIT880S	26
S-PAD-DNC880S.....	27
S-COQ-880S	28
S-EPD-880S.....	29
S-CDC-CXAP1212B	30
S-CNF-PLKINV/B (cable for inverter).....	30
S-KIT-CF1GBTL.....	31

ModEva and CNC Rack

S-CPU-ME-XPE/A2 (2D)	32
S-CPU-ME-XPE/A3 (3D)	32

S-OFT-3D.....	33	S-CNF-PLKINV/A (cable for inverter)	52
S-CPU-ME-XPE/B	34	S-PLK-ME1201	53
S-CPU-ME-XPE/C	35	S-TRA-SENSOR/C.....	54
S-SUP-POWER-BS	36	S-CLE-SOFT/USB	55
S-KIT-CF1GBTL.....	37	S-OPT-EARTHKITC.....	56
A-IMF-CF1GB1/A.....	38	S-OPT-EARTHKITM.....	57
S-NCX-ME201	39	S-KIT-QUICKC/A.....	58
S-NCX(CAN)	40	S-KIT-QUICKC/B.....	59
S-NIN-ME204.....	41	S-PAD-MODEVA10S	60
S-JDC-NIN.....	42	S-EPD-MOD12S	61
S-NLR-ME103DM	43	S-EPD-MOD15S	62
S-JDC-NLR	44	S-EPD-MOD15	63
S-NMX-ME201	45	S-PAD-MODEVA12S	64
S-JDC-N2X.....	46	S-PAD-MODEVA15T	65
S-NOT-ME204.....	47	S-CPU-ME-XP/RA	66
S-JDC-NOT.....	48	S-CPU-ME-XP/RAP.....	66
S-NPU-ME1201.....	49	S-066-087 - Single.....	67
S-JDC-NAX/A.....	50	S-066-089 - Double	67
S-NSX-ME211	51	S-RACK-ME/C.....	68
S-CDC-QF82V3.....	52	S-RACK-ME/M.....	69

S-PAD-MODEVARA 70

S-CDC-CXAP16/12 71

CybTouch 6

S-EPD-CT6 72

S-OPT-CBT6/EKIT 73

S-OPT-RFLINK 74

Power supply

Accessories

DESCRIPTION

Power supply 24/30V, ST241-10.303

REFERENCE

S-AST-241A33

COMMENTS



Amplifier

Accessories

DESCRIPTION

Pressure valve amplifier for HOERBIGER valve

REFERENCE

S-CAH-CYBVA6

COMMENTS



Amplifier

Accessories

DESCRIPTION

Pressure valve amplifier for HOERBIGER valve

 
REFERENCE

S-CAH-110

COMMENTS

Only available for special after-sales cases

Replaced by [S-CAH-CYBVA6](#)

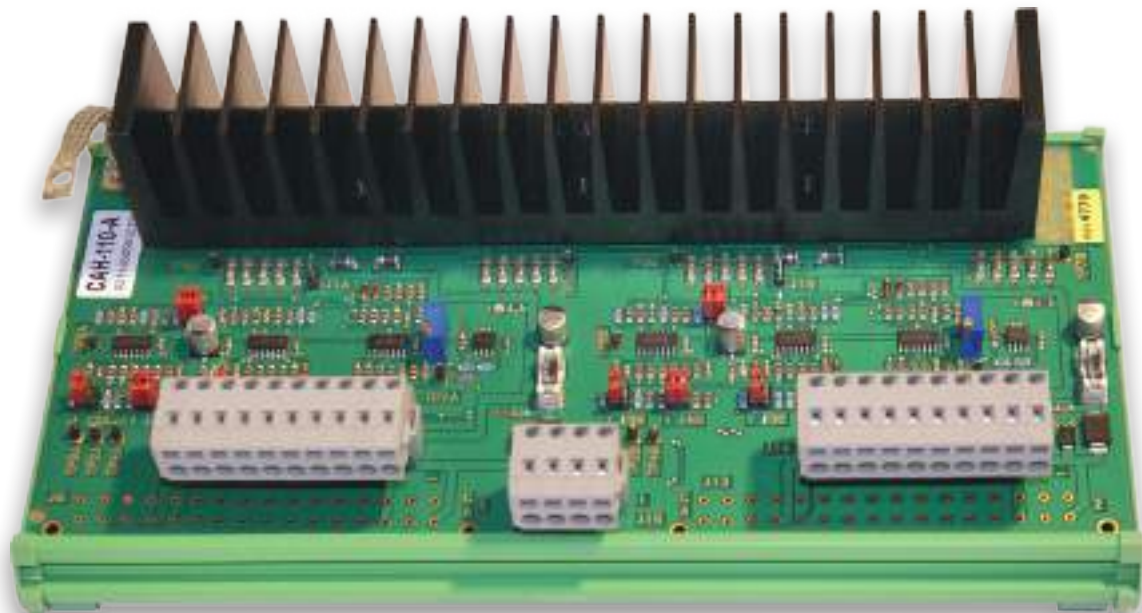

Amplifier

Accessories

 
DESCRIPTION

Pressure valve amplifier

REFERENCE

S-MVP-100/A

COMMENTS

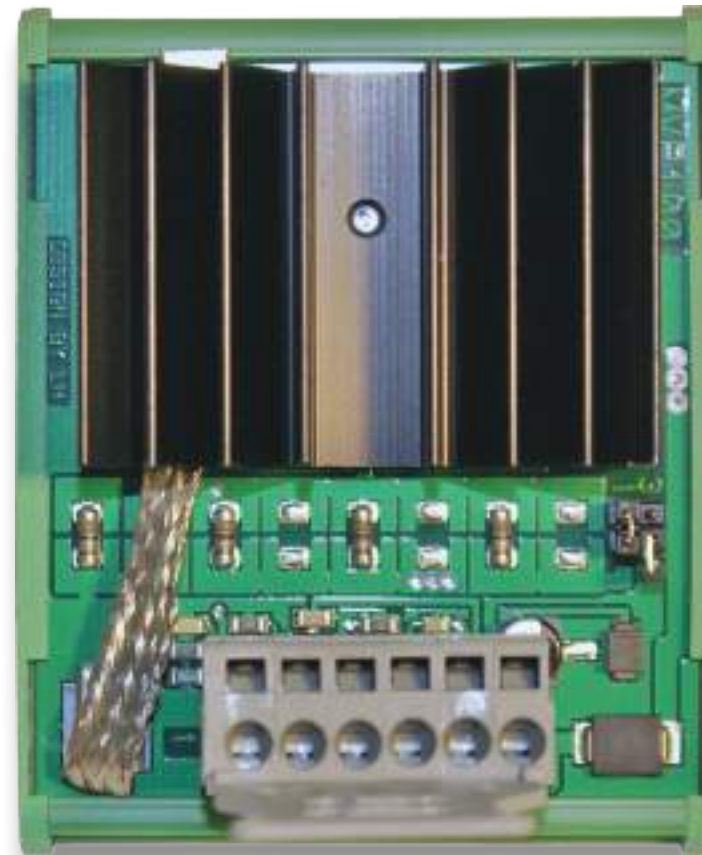

Converter

Accessories

DESCRIPTION

Voltage-current converter for servo-valves
 $\pm 10\text{VDC} \rightarrow \pm 350\text{mA}/\pm 50\text{mA} (24\text{V})$

REFERENCE

S-MSV-402/A

COMMENTS

Please specify the version when ordering:

- ➡ $\pm 10\text{VDC} \rightarrow \pm 350\text{mA}$
- ➡ $\pm 10\text{VDC} \rightarrow \pm 50\text{mA}$



Connector

Accessories

DESCRIPTION

Connector set for additional axes

REFERENCE

S-JDC-MAX

COMMENTS



Board

DNC 60 & DNC 600S

DESCRIPTION

MB6-board for DNC60 press brake; 8 I/O

REFERENCE

S-MB6-DNC60A8

COMMENTS



Board

DNC 60 & DNC 600S

DESCRIPTION

MB6-board for DNC60 press brake; 16 I/O

REFERENCE

S-MB6-DNC60A16

COMMENTS



Board

DNC 60 & DNC 600S


DESCRIPTION

MB6-board for DNC60 sheer; 8I/16O

REFERENCE

S-MB6-DNC60G

 COMMENTS

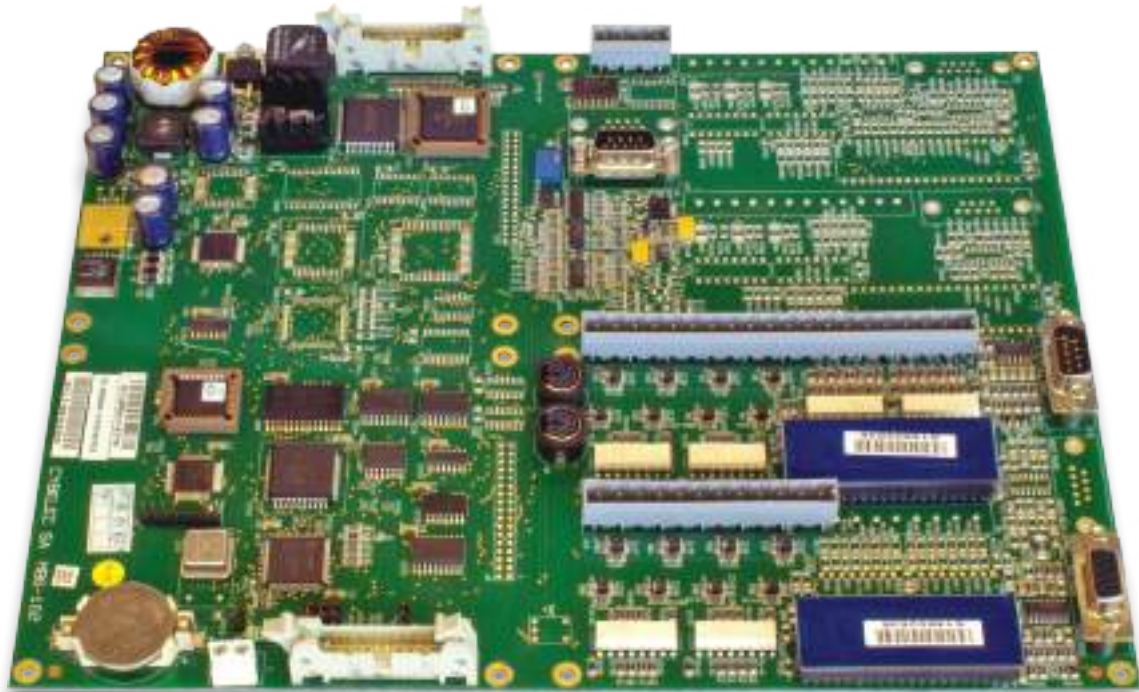

Board

DNC 60 & DNC 600S

DESCRIPTION

MB6-board for DNC600S press brake; 16I/O

REFERENCE

S-MB6-DNC600S

COMMENTS



Keyboard

DNC 60 & DNC 600S

DESCRIPTION

Keyboard for DNC60 including screen and cover

REFERENCE

S-PAD-KIT60

COMMENTS



Keyboard

DNC 60 & DNC 600S

DESCRIPTION

Keyboard for DNC600S including screen and cover

REFERENCE

S-PAD-KIT600S

COMMENTS



Front panel

DNC 60 & DNC 600S

DESCRIPTION

DNC60 front panel without screen

REFERENCE

S-PAD-DNC60

COMMENTS



Screen

DNC 60 & DNC 600S

DESCRIPTION

 
Monochrome screen for DNC60

REFERENCE

S-EPD-60

COMMENTS

Including washers and nuts

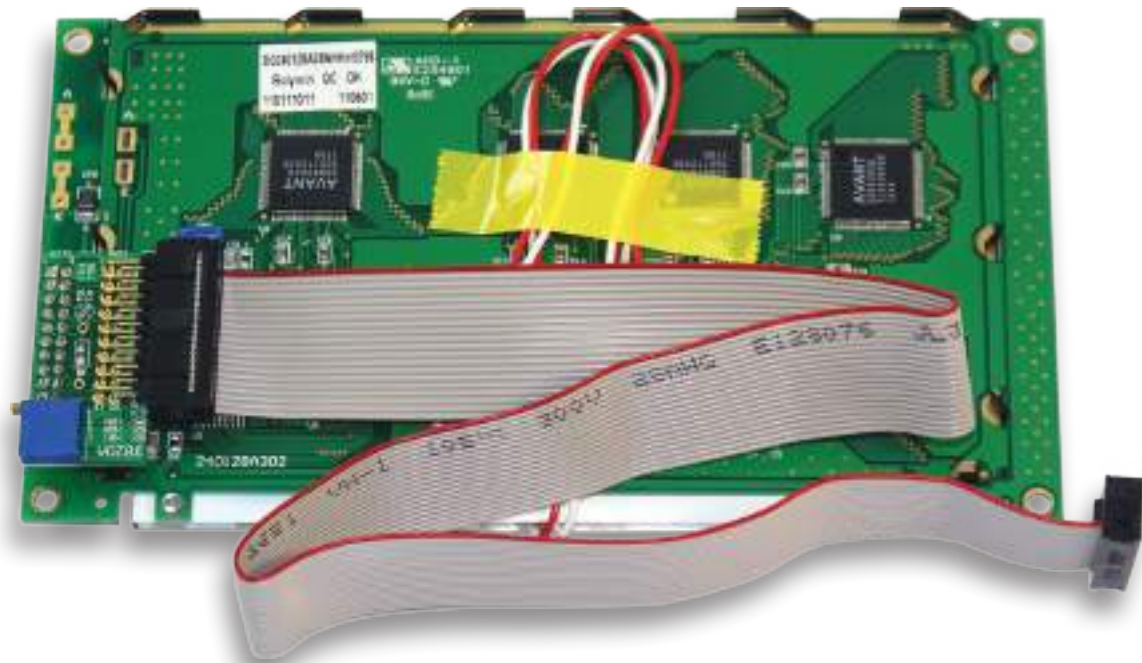

Screen

DNC 60 & DNC 600S

DESCRIPTION

Monochrome screen for DNC600

REFERENCE

S-EPD-600S

COMMENTS



Screen

DNC 60 & DNC 600S

DESCRIPTION

Screen manager for DNC600S

REFERENCE

S-MGR-101_A1

COMMENTS



Connectors

DNC 60 & DNC 600S

DESCRIPTION

Connector set for DNC60

REFERENCE

S-JDC-60

COMMENTS

- ➡ For DNC 63, add 1 x [S-JDC-MAX](#)
- ➡ For DNC 64, add 2 x [S-JDC-MAX](#)



Connectors

DNC 60 & DNC 600S

DESCRIPTION

Connector set for DNC600S

REFERENCE

S-JDC-600S

COMMENTS

- ➡ For DNC 603, add 1 x [S-JDC-MAX](#)
- ➡ For DNC 604, add 2 x [S-JDC-MAX](#)



Box

DNC 60 & DNC 600S

DESCRIPTION

Box for DNC400 and DNC60

REFERENCE

S-COQ-60

COMMENTS



Box

DNC 600S

DESCRIPTION

Box for DNC600S & DNC880S

REFERENCE

S-COQ-600S

COMMENTS



Cable

DNC 60 & DNC 600S

DESCRIPTION

USB to RS232 converter cable

REFERENCE

S-KIT-USB/RS232

COMMENTS



Board

DNC 400

DESCRIPTION

MB6-board for DNC400 press brake; 8 I/O

REFERENCE

S-MB6-DNC402P8

COMMENTS



Box

DNC 400

DESCRIPTION

Box for DNC400 and DNC60

REFERENCE

S-COQ-60

COMMENTS



Board

DNC 880S

DESCRIPTION

MB8 for DNC880S; 16 I/O, incl. CF 1GB
Win XPE license

REFERENCE

S-MB8-DNC880S

COMMENTS



Board

DNC 880S

 
DESCRIPTION

MAX-board for DNC880S, 3 axes and connector set

REFERENCE

S-OPT-MAX300/A

COMMENTS

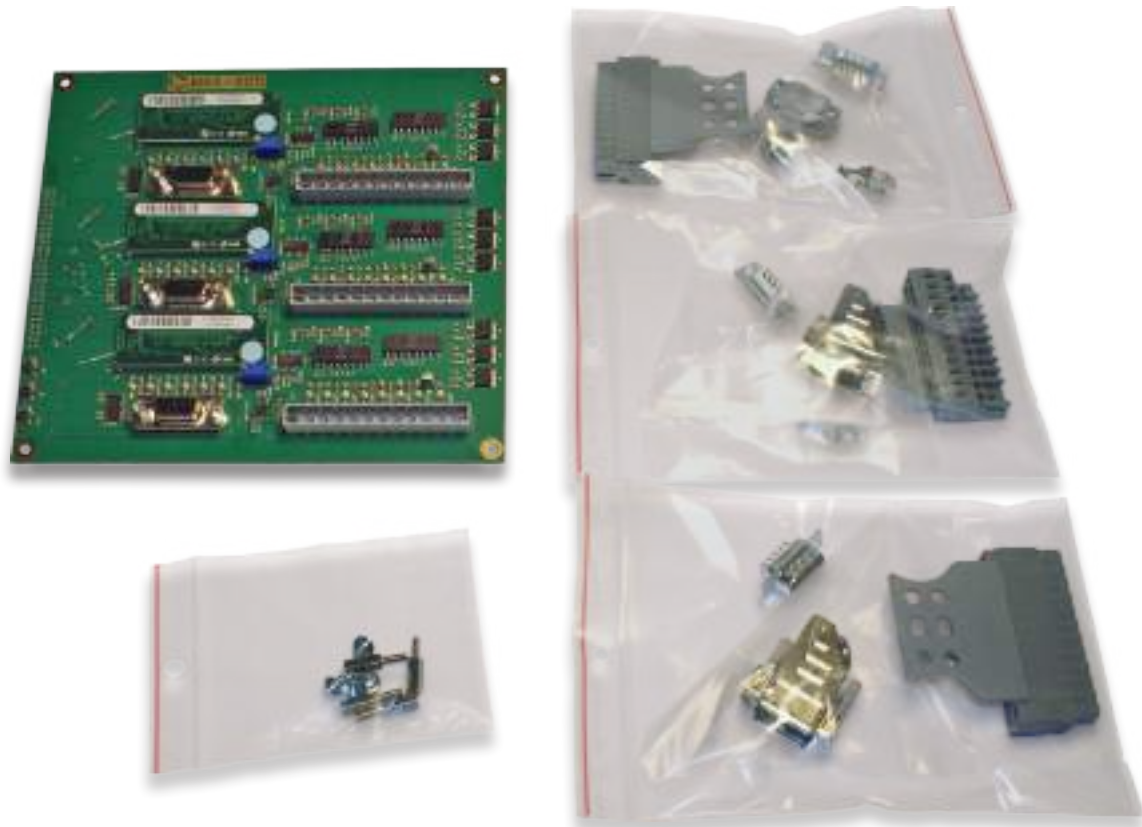

Front panel

DNC 880S

DESCRIPTION

Keyboard for DNC880S including screen and cover

REFERENCE

S-PAD-KIT880S

COMMENTS



Front panel

DNC 880S

DESCRIPTION

Front panel for DNC880S without screen

REFERENCE

S-PAD-DNC880S

COMMENTS



Box

DNC 880S

DESCRIPTION

Box for DNC600S & DNC880S

REFERENCE

S-COQ-880S

COMMENTS



Screen

DNC 880S

DESCRIPTION

10'' Screen TFT for DNC880S

REFERENCE

S-EPD-880S

COMMENTS

Including inverter, fixing plate and cables.



Board

DNC 880S

DESCRIPTION

Inverter DC/AC for DNC 880S

REFERENCE

S-CDC-CXAP1212B

S-CNF-PLKINV/B (cable for inverter)

COMMENTS

Please contact Cybelec if your inverter is not the same as the one shown here.



Update kit

DNC 880S

DESCRIPTION

Flash cards kit for BIOS settings (updating BIOS)

REFERENCE

S-KIT-CF1GBTL

COMMENTS

Including

- ➔ 1x CF for updating BIOS
- ➔ 1x CF with Softwares (Windows & Cybelec)



Board

ModEva and CNC Rack

DESCRIPTION

CPU1202-board with XP Embedded – 2D or 3D

REFERENCE

S-CPU-ME-XPE/A2 (2D)

S-CPU-ME-XPE/A3 (3D)

COMMENTS

➡ 2D for ModEva 10S – 12S – 15T

➡ 3D for ModEva 12S – 15T

Without Dongle.

Please specify your software version or s/n of Numerical Control when ordering!



Software

ModEva and CNC Rack

DESCRIPTION

USB dongle license for PC1200 3D + CYCAD

REFERENCE

S-OFT-3D

COMMENTS



Software + Board

ModEva and CNC Rack

DESCRIPTION

CPU1202-board (Processor PM11), with
XP Embedded

REFERENCE

S-CPU-ME-XPE/B

COMMENTS



Software + Board

ModEva and CNC Rack

DESCRIPTION

CPU1202-board (Processor T40R), with XP Pro

REFERENCE

S-CPU-ME-XPE/C

COMMENTS

For ModEva 15T with 16GB CF



Board

ModEva and CNC Rack

DESCRIPTION

CPU 1202 power supply board

REFERENCE

S-SUP-POWER-BS

COMMENTS



Update kit

ModEva and CNC Rack

DESCRIPTION

Flash cards kit for BIOS settings (updating BIOS)

REFERENCE

S-KIT-CF1GBTL

COMMENTS

Including

- ➔ 1x CF for updating BIOS
- ➔ 1x CF with Softwares (Windows & Cybelec)



Compact Flash

ModEva and CNC Rack

DESCRIPTION

1 GB Flash card for numerical control

REFERENCE

A-IMF-CF1GB1/A

COMMENTS

Including OS installed and latest DNC Software.

A different DNC software version can be installed on request.



Board

ModEva and CNC Rack

DESCRIPTION

NCX-board, for CAN axes

REFERENCE

S-NCX-ME201

COMMENTS



Connectors

ModEva and CNC Rack

DESCRIPTION

Connector set for NCX-board (8 axes)

REFERENCE

S-NCX(CAN)

COMMENTS



Board

ModEva and CNC Rack

DESCRIPTION

NIN204-board for ModEva

REFERENCE

S-NIN-ME204

COMMENTS



Connectors

ModEva and CNC Rack

 
DESCRIPTION

Connector set for NIN-board

REFERENCE

S-JDC-NIN

COMMENTS

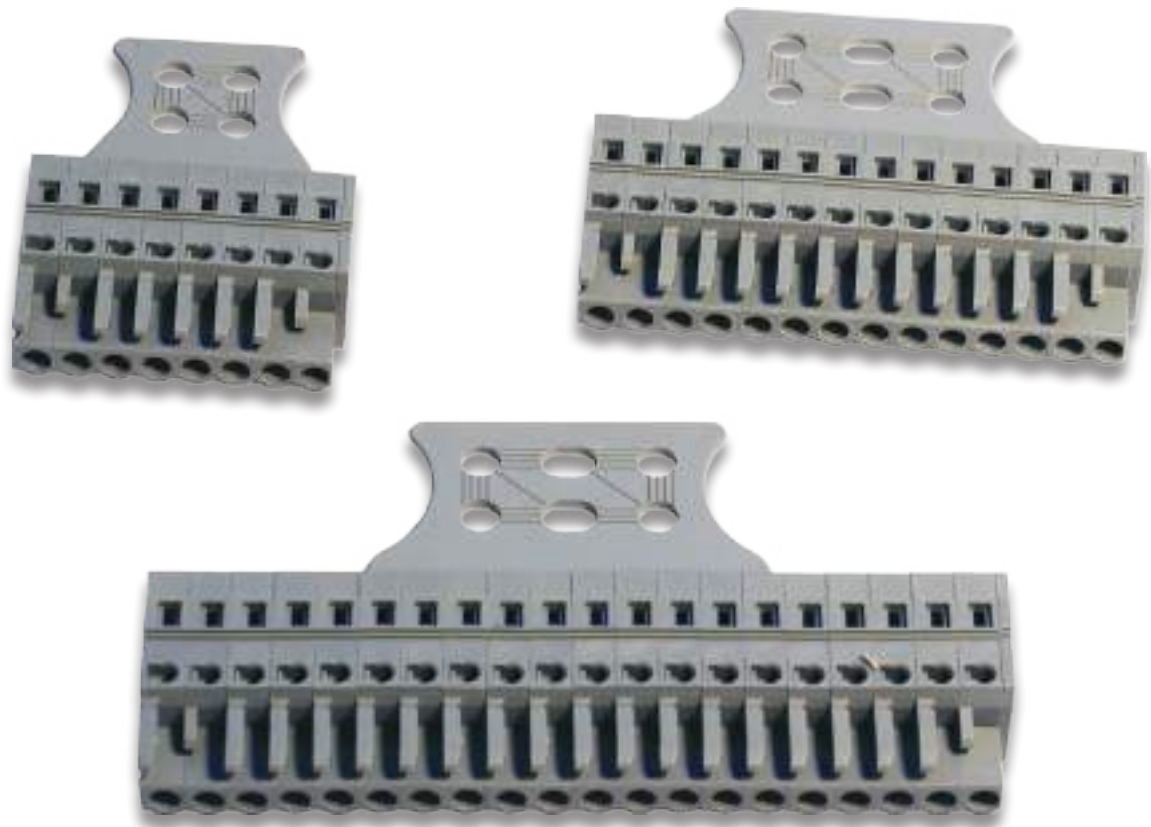

Board

ModEva and CNC Rack

DESCRIPTION

NLR-board, for data measurement points per RS-232

REFERENCE

S-NLR-ME103DM

COMMENTS



Connectors

ModEva and CNC Rack

DESCRIPTION

Connector set for NLR-board

REFERENCE

S-JDC-NLR

COMMENTS



Board

ModEva and CNC Rack

DESCRIPTION

NMX-board, «Master» axes board

REFERENCE

S-NMX-ME201

COMMENTS



Connectors

ModEva and CNC Rack

 
DESCRIPTION

Connector set for NMX- and NSX-board
(two axes)

REFERENCE

S-JDC-N2X

COMMENTS

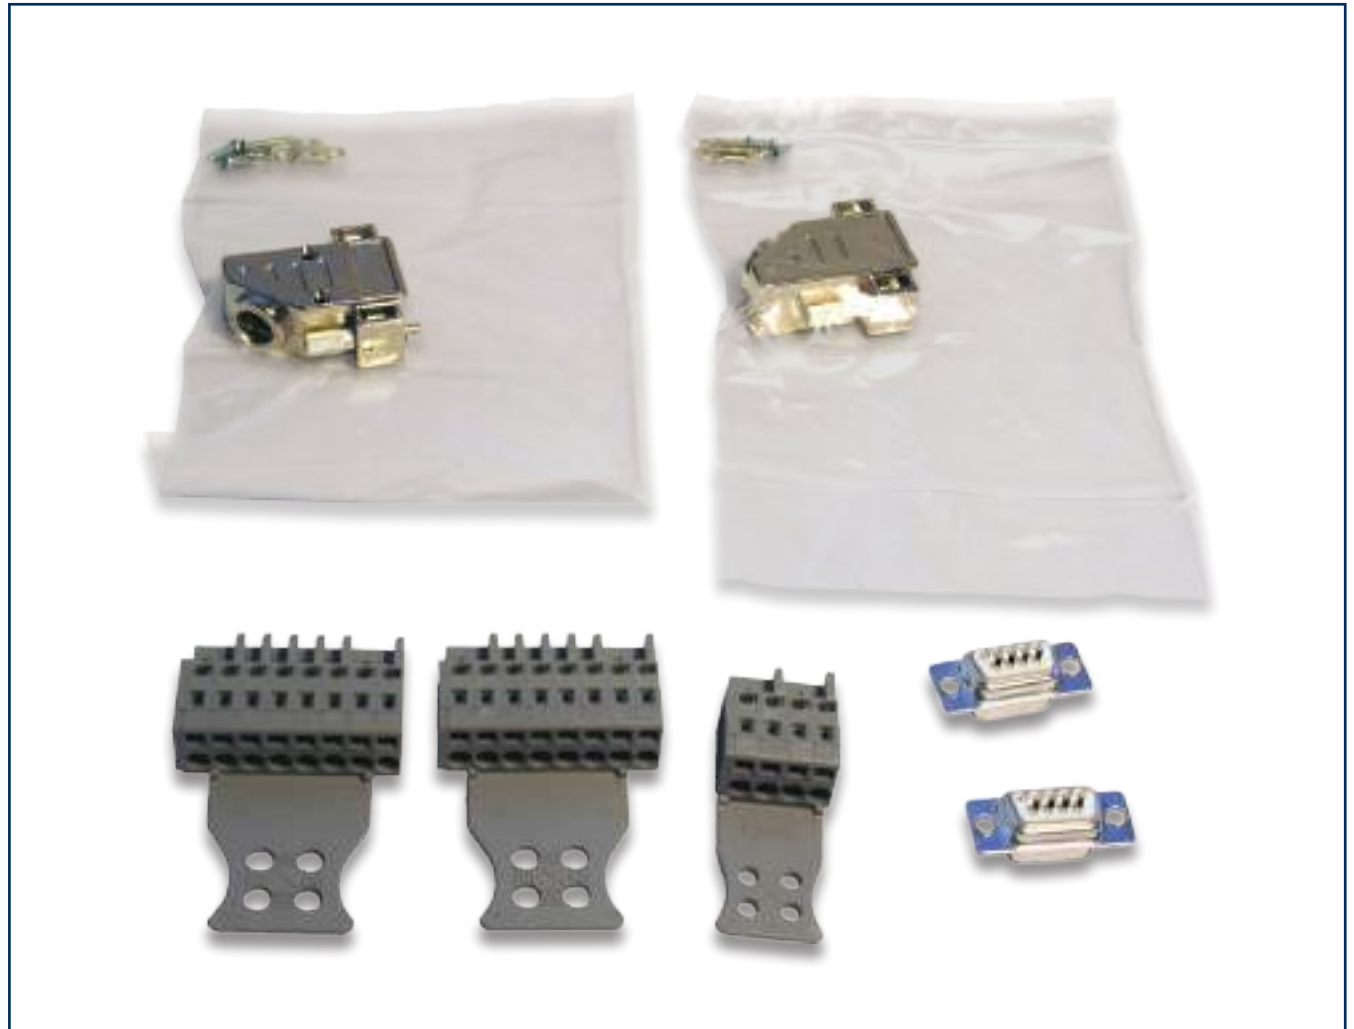

Board

ModEva and CNC Rack

DESCRIPTION

NOT-board, Type 204

REFERENCE

S-NOT-ME204

COMMENTS



Connectors

ModEva and CNC Rack

 
DESCRIPTION

Connector set for NOT-board

REFERENCE

S-JDC-NOT

COMMENTS

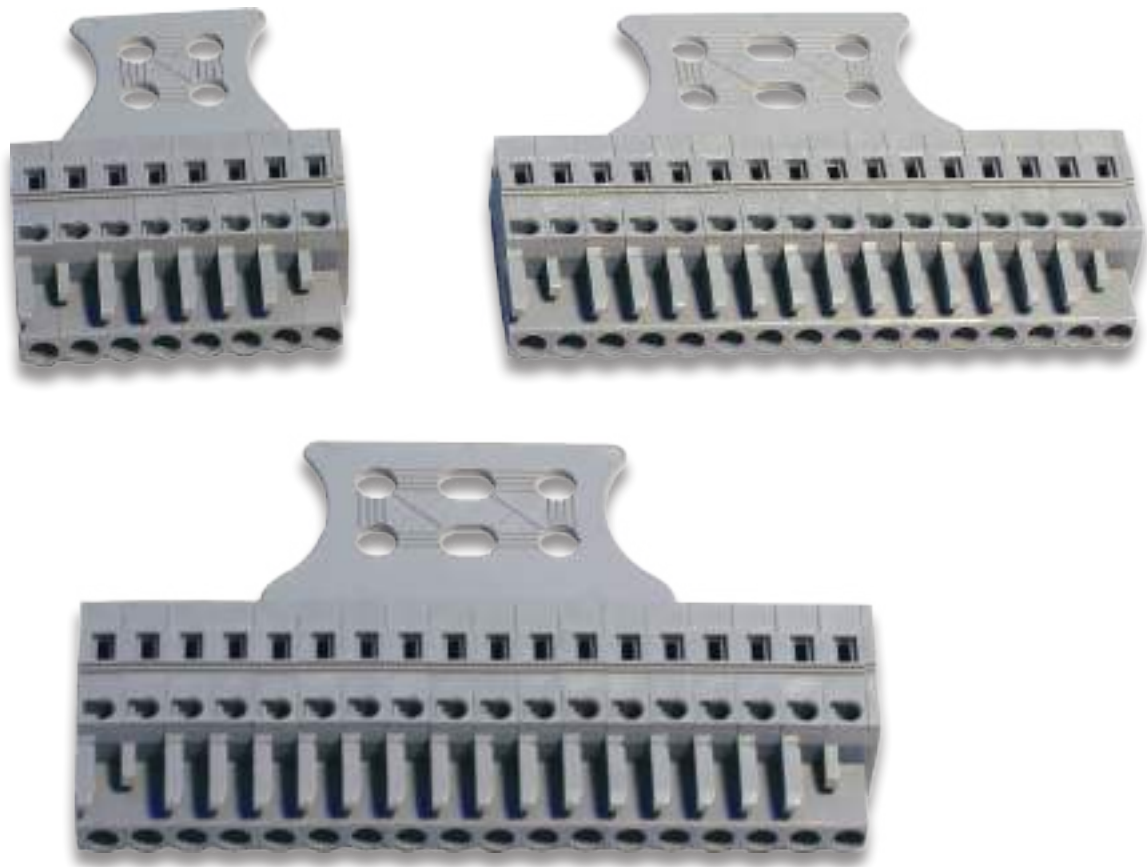

Board

ModEva and CNC Rack

DESCRIPTION

NPU 1201- board for ModEva

REFERENCE

S-NPU-ME1201

COMMENTS



Connectors

ModEva and CNC Rack

DESCRIPTION

Connector set for NPU board

REFERENCE

S-JDC-NAX/A

COMMENTS



Board

ModEva and CNC Rack

 
DESCRIPTION

NSX board, "slaves" axes board

REFERENCE

S-NSX-ME211

COMMENTS

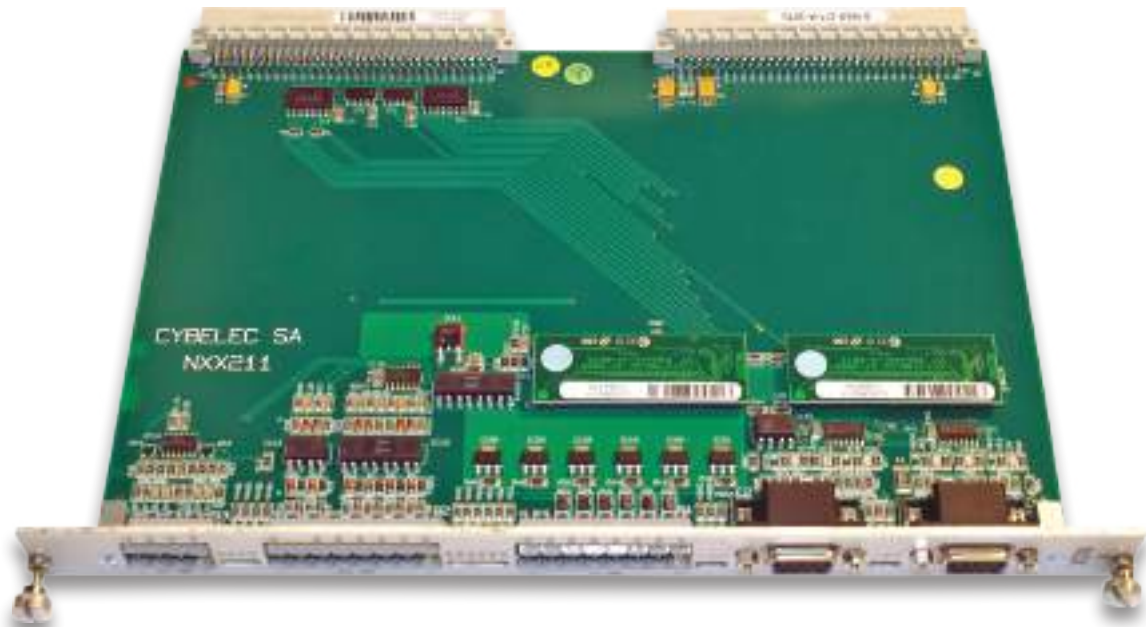

Board

ModEva and CNC Rack

DESCRIPTION

Inverter DC/AC for ModEva 10S and 12S

REFERENCE

S-CDC-QF82V3

S-CNF-PLKINV/A (cable for inverter)

COMMENTS



Board

ModEva and CNC Rack

DESCRIPTION

PLINK board for ModEva 10S, 12S, 15S, 15T and RA

REFERENCE

S-PLK-ME1201

COMMENTS



Board

ModEva and CNC Rack

DESCRIPTION

Track sensor for ModEva 12S & 15S

REFERENCE

S-TRA-SENSOR/C

COMMENTS



Accessory

ModEva and CNC Rack

DESCRIPTION

USB dongle for PC or DNC

REFERENCE

S-CLE-SOFT/USB

COMMENTS

For replacement, please specify the original options and serial number of dongle and numerical control



Accessory

ModEva and CNC Rack

 
DESCRIPTION

Earthing kit for Rack C

REFERENCE

S-OPT-EARTHKITC

COMMENTS

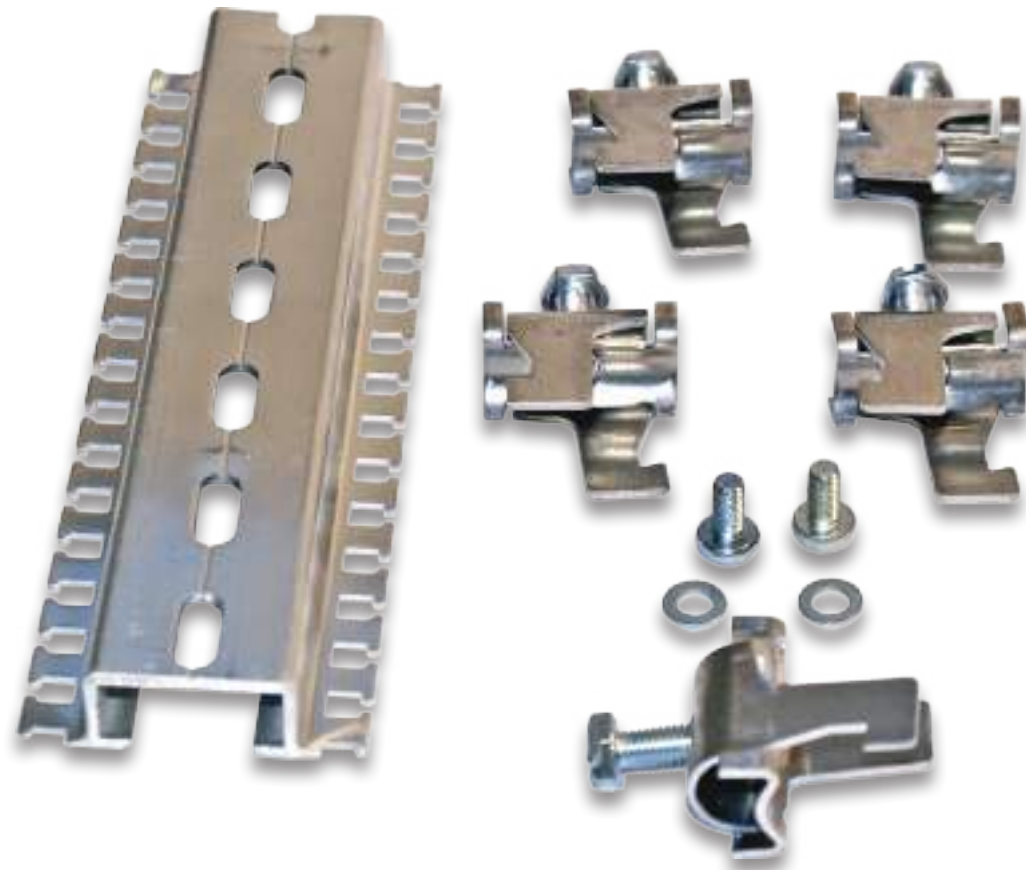

Accessory

ModEva and CNC Rack

 
DESCRIPTION

Earthing kit for Rack M

REFERENCE

S-OPT-EARTHKITM

COMMENTS

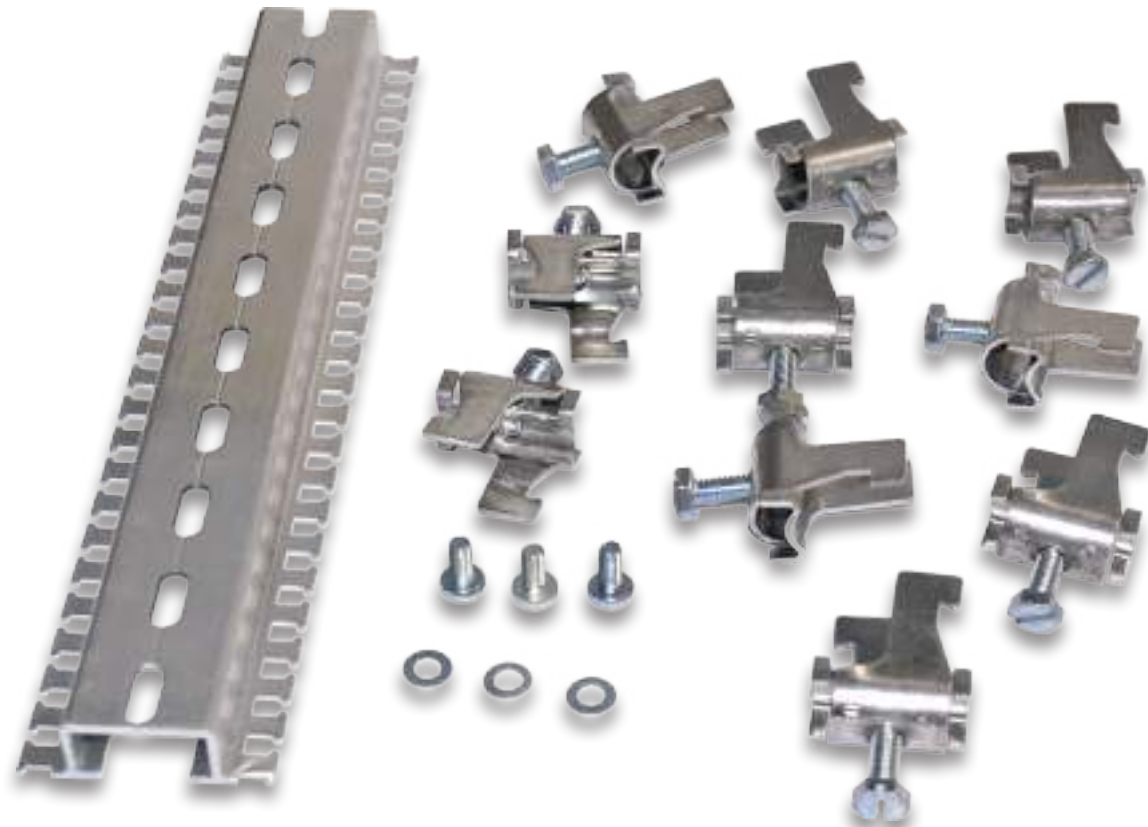

Accessory

ModEva and CNC Rack

DESCRIPTION

Quick Cursor for ModEva 12S

REFERENCE

S-KIT-QUICKC/A

COMMENTS



Accessory

ModEva and CNC Rack

DESCRIPTION

Quick Cursor for ModEva10S

REFERENCE

S-KIT-QUICKC/B

COMMENTS



Front panel

ModEva and CNC Rack

DESCRIPTION

ModEva10S front panel

REFERENCE

S-PAD-MODEVA10S

COMMENTS



Screen

ModEva and CNC Rack

DESCRIPTION

12" screen TFT for ModEva 12S

REFERENCE

S-EPD-MOD12S

COMMENTS



Screen

ModEva and CNC Rack

 
DESCRIPTION

15" screen TFT for ModEva 15S

REFERENCE

S-EPD-MOD15S

COMMENTS

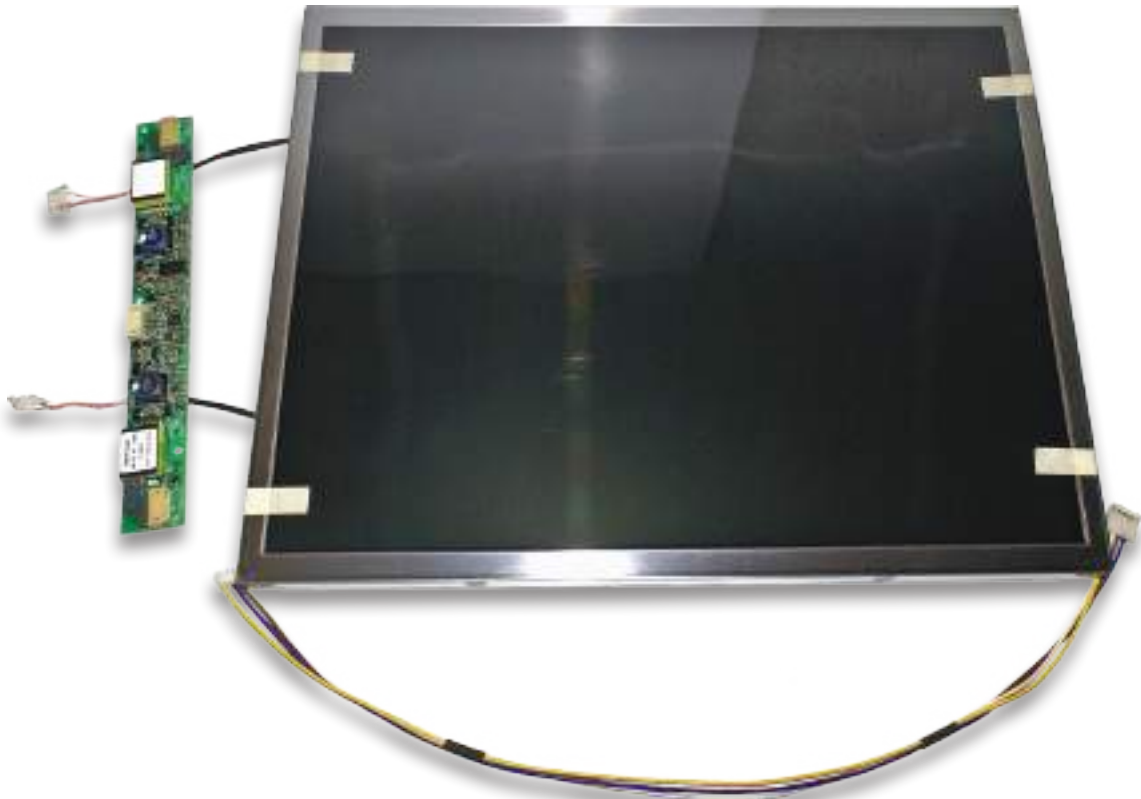

Screen

ModEva and CNC Rack

DESCRIPTION

15" screen TFT for ModEva 15T, ModEva Pac & DNC 15

REFERENCE

S-EPD-MOD15

COMMENTS

Please specify the type of your numerical control with the order.



Front panel

ModEva and CNC Rack

DESCRIPTION

ModEva12S front panel, without screen

REFERENCE

S-PAD-MODEVA12S

COMMENTS



Front panel

ModEva and CNC Rack

DESCRIPTION

ModEva15T front panel, touchscreen

REFERENCE

S-PAD-MODEVA15T

COMMENTS

Screen not included



Board

ModEva and CNC Rack

DESCRIPTION

Processor board for ModEva RA

REFERENCE

S-CPU-ME-XP/RA

S-CPU-ME-XP/RAP

COMMENTS

- ➡ /RA: ModEvaRA
- ➡ /RAP: ModEva RA Premium

Please do not forget to mention the s/n of CNC rack when ordering, otherwise a Windows license will be invoiced a second time.



Accessory

ModEva and CNC Rack

DESCRIPTION

Rack slot cover (when slot is not used)

REFERENCE

S-066-087 – Single

S-066-089 – Double

COMMENTS



Single



Double

Rack

ModEva and CNC Rack

DESCRIPTION

Compact (C) size CPU rack for ModEva CPU

REFERENCE

S-RACK-ME/C

COMMENTS



Rack

ModEva and CNC Rack

 
DESCRIPTION

Medium (M) size CPU rack for ModEva

REFERENCE

S-RACK-ME/M

COMMENTS

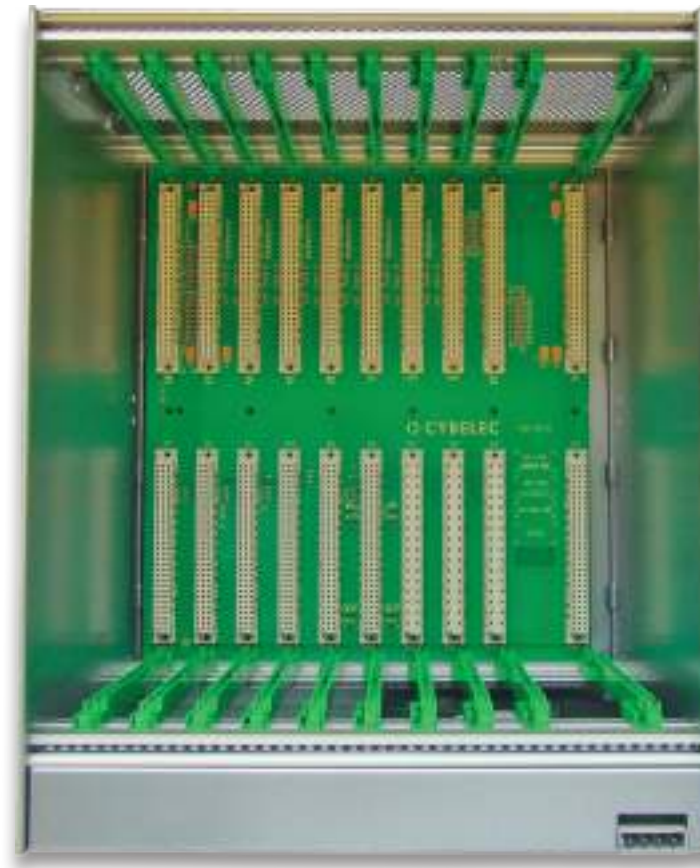

Front panel

ModEva and CNC Rack

DESCRIPTION

ModEva RA front panel, touchscreen

REFERENCE

S-PAD-MODEVARA

COMMENTS

Screen not included



Board

ModEva and CNC Rack

DESCRIPTION

Inverter DC/AC for TFT screen for Modeva 15T and RA

REFERENCE

S-CDC-CXAP16/12

COMMENTS



Screen

CybTouch 6

DESCRIPTION

Screen replacement kit with connector

REFERENCE

S-EPD-CT6

COMMENTS



Accessory

CybTouch 6

DESCRIPTION

Earthing kit

REFERENCE

S-OPT-CBT6/EKIT

COMMENTS



Accessory

CybTouch 6

DESCRIPTION

RFLink (radio-frequency) USB dongle

REFERENCE

S-OPT-RFLINK

COMMENTS

